



DEALER REFERENCE LIST

IMPORTANT: See the machine parts manual for related parts. Skid Loader battery information is the same for unlettered, GEN:1, GEN:2, E and EU models. One battery used per machine unless noted.



Batteries - Skid Loader

Quick Reference List

Table of Contents

- SL Series - Page 1
- R Series - Page 2
- V Series - Page 2

<u>Model</u>	<u>Serial Number</u>	<u>Battery Group Size</u>	<u>Cold Cranking Amps (CCA)</u>
1640	012003 & Up	34	700
1640	012002 & Before	24	675
3310 / 3410		45	470
3510 / 3610		45	470
3635 / 3935		24	675
3640	004605 & Up	34	700
3640	004604 & Before	24	675
3840	005101 & Up, Plus 004989-004991	34	700
3840	005100 & Before	24	675
3725		45	470
3825		24	675
4240	008545 & Up, Plus 008502, 008508, 008510, 008525, 008526, 008532-008541	34	700
4240	008544 & Before	24	675
4510		24	675
4515		24	675
4610		27	575
4615		27	575
4525		45	470
4625		31	950

<u>Model</u>	<u>Serial Number</u>	<u>Battery Group Size</u>	<u>Cold Cranking Amps (CCA)</u>
4635		31	950
4640		31	950
4835		31	950
4840		31	950
5240		31	950
5620		31	950
5625		31	950
5635		31	950
5640		31	950
6620		31	950
6625		31	950
6635		31	950
6640		31	950
7600		31	950
7800		31	950
7610	702233 & Up	24 (both batteries)	675
7610	702232 & Before	31	950
7810	903395 & Up	24 (both batteries)	675
7810	903394 & Before	31	950



IMPORTANT: See the machine parts manual for related parts. Skid Loader battery information is the same for unlettered, GEN:1, GEN:2, E and EU models. One battery used per machine unless noted.

DEALER REFERENCE LIST



Batteries - Skid Loader

Quick Reference List

Table of Contents
 SL Series - Page 1
 R Series - Page 2
 V Series - Page 2

<u>Model</u>	<u>Serial Number</u>	<u>Battery Group Size</u>	<u>Cold Cranking Amps (CCA)</u>
R135		34	700
R150		31	950
R165		31	950
R190		31	950
R220		31	950
R260		31	950
V270		31	950
V330		31	950
V400		34	800

<u>Model</u>	<u>Serial Number</u>	<u>Battery Group Size</u>	<u>Cold Cranking Amps (CCA)</u>

NOTES: